

封底



www.jabees.com



Jabees
Love Life Love Music

Firefly.2
Waterproof True Wireless Earbuds

QUICK REFERENCE GUIDE

封面

THANKS FOR YOUR PURCHASE.

Introducing the latest advancement in wearable audio tech – Firefly 2, the new IPX7 waterproof noise-reducing, dual-microphone headphones.

We hope you will love the earbuds as much as we do!

Love from The Jabees Team

IN THE BOX

Firefly 2 & Charging Case, User Manual, Retail Box, Earbuds in 2 Different Shapes (L/M/S), USB-C Charging Cable

PRODUCT OVERVIEW

(1) Speaker, (2) Charging Contact Points, (3) LED Light, (4) MF Touchpad (Multifunction Touchpad), (5) Earbuds, (6) Factory Reset Button, (7) LED Indicator of Function Status, (8) Red LED Indicator or Battery Charging Status, (9) Earbuds Charging Slots, (10) The Lid of Charging Case, (11) USB Type-C Charging Port, (12) Microphone 2

HOW TO SET UP

Step One – Power On

AUTO POWER ON: Open the lid of the Charging Case. Two earbuds turn on and connect to each other automatically.

MANUALLY POWER ON: Press the MF Touchpad on two earbuds for one second to power on manually.

NOTE: 1. The earbuds will connect to your mobile phone as soon as you open the lid of the Charging Case after initial pairing. 2. If you place any one of these two earbuds into the Charging Case, the one outside will stay connected to your mobile phone. 3. If no pairing is active for a period of time (approximately 5 minutes), the earbuds will turn off automatically. 4. When one earbud is out of power, the another one will stay connected to your mobile phone. 5. Close the lid of the Charging Case will turn off the earbuds automatically.

Step Two – Complete Set Up

Search for "Firefly.2" via your phone to complete the connection.

NOTE: 1. The earbuds will connect to your mobile phone as soon as you open the lid of the Charging Case after initial pairing. 2. If you place any one of these two earbuds into the Charging Case, the one outside will stay connected to your mobile phone. 3. If no pairing is active for a period of time (approximately 5 minutes), the earbuds will turn off automatically. 4. When one earbud is out of power, the another one will stay connected to your mobile phone. 5. Close the lid of the Charging Case will turn off the earbuds automatically.

HOW TO WEAR

The earbuds come with medium sized eartips attached to the earbuds and small and large tips included in the box.

Change The Eartips (If Needed)

NOTE: All ears are different. Please try different sized eartips until you find the right fit.

Wear The Earbuds

Insert the earbuds in each ear, and adjust to fit in most comfortably.

REMOTE CONTROL

① MF Touchpad on Left Earbud

Power On	Press for 1 second
Play/Pause Music	Double tap
Answer/End The Call	Double tap
Next Song	Triple tap
Volume Up	Press and hold
Switch Between Languages	Triple tap when the earbuds are not connected to each other and to the phone
Voice Assistant (Siri & Google Assistant)	Double press when the earbuds are not making calls or listening to music

② MF Touchpad on Right Earbud

Power On	Press for 1 second
Play/Pause Music	Double tap
Answer/End The Call	Double tap
Next Song	Triple tap
Volume Up	Press and hold
Switch Between Languages	Triple tap when the earbuds are not connected to each other and to the phone
Voice Assistant (Siri & Google Assistant)	Double press when the earbuds are not making calls or listening to music

③ MF Button on Charging Case

Factory Reset The Earbuds	Press and hold for 10 seconds when the earbuds are in the case.
Put The Earbuds Into Pairing Mode with Mobile Phone	Press and hold for 3 seconds

HOW TO CHARGE

Charging The Earbuds

When the battery is low, you will hear the voice prompt "Low battery please charge". You can also refer to the battery meter on iOS devices.

① Charging By Qi Wireless Charger

The Firefly 2 Charging Case is compatible with almost all Qi-enabled devices. Simply place the case on a wireless charging mat to charge. No plugging or unplugging of cables required. It takes about 3 hrs to fully charge the case.

② Charging By Type-C Cable

It takes about 2 hrs to fully charge the case by the cable.

LED Indicator Lights on The Charging Case

Left LED Indicator Light: Battery Capacity and Charging Status of The Case.

Right LED Indicator Light: Turns on in red once being charged.

Battery Capacity of the Case

LED Color	Battery Capacity
Red	0%-25%
Yellow	25%-75%
Green	75%-100%

IMPORTANT:

- For your first use, please make sure to fully charge the Firefly 2 beforehand.
- You should recharge Firefly 2 if it hasn't been used for more than 12 months.
- You must use the authorized charger to recharge the product.

Firefly 2 supports Fast Charging. By charging for just 10 mins, you get 2 hrs of music playback. It only takes around 45 mins to fully charge the earbuds. You get up to 10 hrs of music time on one single full charge.

VOICE ASSISTANT

Double press the MF Touchpad on the Right Earbud to activate Siri or Google Assistant.

NOTE:

- The Voice Assistant cannot be activated when making calls or listening to music.
- You may encounter the problem to wake up Google Assistant from lock screen or when the screen is off. If so, please unlock the screen and try again.

LANGUAGE SELECTING

Firefly 2 supports voice prompt in English and Chinese, you can switch between the languages when the earbuds are not connected to each other and to the mobile phone.

- Turn off the Bluetooth function of the connected mobile phone.
- Open the lid of the Charging Case, remove one earbud from the case, then close the lid so the second earbud can be off and disconnected.
- Triple tap the MF Touchpad of the first earbud to switch between the languages.
- Repeat this procedure to change the language on the second earbud.

FACTORY RESET

To restore the earbuds to factory settings, put the earbuds back into the Charging Case, then long press the MF Button on the case for 10 seconds. The Left LED Indicator Light on the Charging Case will flash in white then turned off to indicate that the factory reset is successful.

NOTE:

- After the Factory Reset, two earbuds will connect to each other automatically when you open of the lid of the case. Start over the "HOW TO SET UP" and connect the earbuds to your mobile phone.

GUARANTEE

Jabees is a registered trademark of FreeTek International Co., Ltd. Other brands and product names are trademarks of their respective owners. Jabees warrants this product against all defects in material and workmanship for a period of twelve (12) months from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of Jabees under this guarantee can be read in the Warranty Card.

WARNING

Permanent hearing loss may result from long-term exposure to sound at high volumes. Use as low a volume as possible and avoid prolonged use of the earphone at excessive levels. Please read the safety guidelines below prior to using this product.

Prior to using this product follow these steps:

- Before putting on the earphone, turn the volume control to its lowest level.
- Put the earphone on, and then slowly adjust the volume control to a comfortable level.
- If you experience discomfort or ringing in your ears, immediately discontinue using the earphone.
- With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

REMEMBER: Drive safely, avoid distractions and follow local laws.

SAFETY INFORMATION

- If you have a cardiac pacemaker or other electronic medical equipment, you should consult your physician before using this product.
- This product contains small parts that may be hazardous to children. Keep out of the reach of children. The bags themselves or the many small parts they contain may cause choking if ingested.
- Never attempt to disassemble the product yourself, or push other objects into this product, as this may cause a short circuit, which could lead to fire or electrical shock.
- None of the components can be replaced or repaired by users. Only an authorized dealer or service center may open the product.
- If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact your dealer.
- If the product overheats, has been dropped or damaged or has been submerged in a liquid, discontinue use.

BTHS200401_V2.2

封底



www.jabees.com



Jabees
Love Life Love Music

Firefly.2
Waterproof True Wireless Earbuds

快速參閱指南

封面

感謝您選購Firefly.2

在本“快速參閱指南”中，我們將介紹最先進的可穿戴音頻耳機-Firefly.2，新型IPX7防水降噪雙麥克風耳機。

希望您將如我們所期待那樣愛上這款耳機！

Love from The Jabees Team

包裝與配件

Firefly 2 & 充電盒, 說明書, 禮盒, Earbuds in 2 Different Shapes (L/M/S), USB-C 充電線

圖示

(1) 喇叭, (2) 電池充電點, (3) LED指示燈, (4) 多功能觸控鍵, (5) 耳機充電槽, (6) 出廠設置按鈕, (7) 充電盒功能狀態指示燈, (8) LED指示燈, (9) 耳機充電槽, (10) 充電盒蓋子, (11) USB Type-C 充電口, (12) 麥克風 2

如何使用Firefly.2

步驟一 TWS開機連接兩個耳機

自動開機: 打開充電盒蓋子。耳機將自動與您的手機連接。

手動開機: 按多功能觸控鍵1秒將耳機開機。

步驟二 將耳機與手機連接

將您的手機的藍牙功能打開，在手機上搜索藍牙設備，選擇"Firefly.2"，根據手機指示完成連接。

注意:

- 首次與手機配對成功後，只要打開充電盒蓋子，耳機將自動與您的手機連接。
- 將任意一只耳機放入充電盒中，另一只耳機會保持與手機連接。
- 如果耳機在開機5分鐘內未與您的設備配對，則會自動關機。
- 任意一只耳機由於電量低被關機時，另一只耳機會保持與手機連接。
- 關閉充電盒蓋子，耳機會自動關機。

如何佩戴耳機

包裝盒內配有大中小三種尺寸的耳帽。其中，中號耳帽已裝置在耳機上。

更換耳帽（如有需要）

注意: 由於每個人耳朵大小形狀各異。請根據自身需要，嘗試不同尺寸的耳帽，以找到適合您使用的耳帽，讓耳機佩戴起來更舒適。

佩戴耳帽

將耳塞分別插入左右耳，調整到最舒適的位置。

觸控鍵功能

Firefly.2採用專利設計的觸控鍵集成按壓型按鍵。

① 左耳機多功能觸控鍵

開機	按多功能觸控鍵1秒
播放/暫停音樂	觸碰多功能觸控鍵2下
接聽/結束通話	觸碰多功能觸控鍵2下
下一曲	觸碰多功能觸控鍵3下
增加音量	長按多功能觸控鍵直至調節到合適音量
切換語音提示語種	觸碰多功能觸控鍵3下（確保耳機未相互連接且未連接到手機）
語音助手(Siri或谷歌助手)	按多功能觸控鍵2下（確保耳機不在通話或播放音樂狀態）

② 右耳機多功能觸控鍵

開機	按多功能觸控鍵1秒
播放/暫停音樂	觸碰多功能觸控鍵2下
接聽/結束通話	觸碰多功能觸控鍵2下
下一曲	觸碰多功能觸控鍵3下
增加音量	長按多功能觸控鍵直至調節到合適音量
切換語音提示語種	觸碰多功能觸控鍵3下（確保耳機未相互連接且未連接到手機）
語音助手(Siri或谷歌助手)	按多功能觸控鍵2下（確保耳機不在通話或播放音樂狀態）

③ 充電盒上的多功能按鍵

耳機恢復出廠設置	長按多功能按鍵約10秒（當耳機在充電盒時）
設置耳機連入與手機的配對模式	長按多功能按鍵約3秒

如何充電

為Firefly.2充電

當耳機處於低電狀態時，您應聽到語音提示。此時，請將Firefly.2充電。

iPhone以及其他iOS設備上顯示電量（如圖）。

Firefly.2支持快速充電。充電10分鐘，可達2小時續航。而為耳機充滿電只需大約45分鐘。每次充滿電時，可持續使用耳機播放音樂約10小時。

為充電盒充電

Firefly.2配備的充電盒，內置電池容量500mAh，可為Firefly.2提供約2個回合的充電（即20小時的使用時間）。當充電盒蓋子打開，充電盒上左邊的LED紅色指示燈長亮時，請為充電盒充電。

充電時，充電盒左邊的LED白色指示燈長亮；充滿電後，LED白色指示燈熄滅。

①通過Qi充電設備充電

Firefly.2充電盒兼容絕大部分的Qi的充電設備。只需簡單地將充電盒放在無線充電板上即可充電，無需插拔充電線。

充電盒充滿電大約需要3小時。

②通過USB Type-C充電線充電

通過USB Type-C充電線給充電盒充滿電大約需要2小時。

充電盒上的LED指示

左LED指示燈: 電池電量和充電盒充電狀態燈

右LED指示燈: 充電時，紅燈長亮

語音助手

按右耳機的多功能觸控鍵2下，激活Siri或谷歌助手。

注意:

- 當耳機在通話或播放音樂時，無法啟動語音助手。
- 當手機螢幕在關閉或休眠狀態時，可能偶爾會出現無法啟動語音助手的情況，此時，請開啟螢幕並重試。

切換語音提示語種

Firefly.2支持英文和中文的語音提示。當耳機未相互連接且未連接到手機時，可切換耳機的語音提示語種。

1. 關閉已連接過Firefly.2的手機的手機功能。

2. 打開充電盒蓋子，將單個耳機從充電盒取出，然後關閉充電盒蓋子，這樣充電盒內部的另一只耳機才會與耳機自動連接。觸摸第一個耳機的多功能觸控鍵3下，這時耳機會切換到另外一種語音。

3. 第二個耳機也需按此操作步驟來切換不同語種。

恢復出廠設置

如需恢復出廠設置，將耳機放入充電盒中，長按充電盒上的多功能觸控鍵10秒。當充電盒左邊LED白色指示燈閃爍，然後熄滅，即證明恢復出廠設置成功。

溫馨提示:

恢復出廠設置後，當您再次打開充電盒的蓋子時，耳機會自動相互連接。請參考快速參閱指南的“如何使用Firefly.2”，將耳機連接到您的手機使用。

質量保證

Jabees樂蜂是飛利特國際有限公司註冊的商標。其他品牌和產品名稱是其各自所有者的商標。產品的原始購買之日起2個月內，如發現產品材料及工藝有缺陷，Jabees樂蜂將予以保修。保修條件和Jabees樂蜂承擔的責任範圍可參照保修卡。

警告

長期暴露于高音量可能導致永久性聽覺受損。請儘量調低音量，避免在過度聲音壓力水平下長時間使用耳機。在使用此耳機前，請先閱讀以下的安全指導原則。

（請在使用本產品前請閱讀以下步驟）

- 在戴上耳機前，將音量調至最低程度。
- 戴上耳機，然後慢慢地將音量調整到感覺舒適的水平。
- （使用本產品時）
- 儘可能維持在最低音量。
- 如果您覺得耳朵不適或感覺耳鳴等作響，請立即停止使用耳機。如果您持續以高音量使用耳機，您的耳朵可能會變得適應此種音量，使得耳朵在沒有明顯不適的情況下受到永久性的傷害。

安全諮詢！

- 如果您使用心臟起搏器或其他電子醫療裝置，使用本產品之前，請徵求醫生的意見。
- 本產品包裝含有小配件，可能會對小孩構成危險。請將產品放在孩童無法接觸到的地方。吞食塑膠袋或袋中所裝的小零件可能導致窒息。
- 切勿嘗試自行拆卸產品。亦不可將任何類別的物件插入產品內，因為這可能導致短路或造成永久火災或燒傷。
- 使用者不可以對本產品中的任何組件進行更換或修理。只有授權的經銷商或維修中心才可拆卸本產品。
- 如果基於任何原因而需要更換產品中的任何零件（包括正常損壞、破損或損毀），請與您的經銷商聯絡。
- 如果產品過熱、產品掉下或受損，或者掉在液體中，請停止使用。

切記: 務必保證安全駕駛，避免分心，並注意當地法律。

BTHS200401_V2.2