

此页不印刷，本文件共14页。

SIZE:100MM*100M

材质：封面铜版纸 内页：书纸

工艺：封面过哑膜



PANTONE Black C

注意：不要随便删减空白页（特别是封面内页不能出现印刷内容）

CanPark®

PC02 Webcam



User Manual

SAFETY WARNINGS

- Please do not attempt to modify this webcam.
- Please do not place the webcam in extremely damp or dusty locations.
- Please do not place the webcam in places subject to extremely high temperatures, such as in a closed vehicle or direct sunlight.

Exposure to high temperatures may adversely affect the webcam and its internal components.

- Please do not remove the webcam casing. Internal inspection, maintenance and repairs should be carried out by an authorized service facility.
- Please do not expose the product to fire, water, high temperature, direct sunlight, or excessive physical shock.
- Please do not bump or drop webcam as this may cause the webcam to malfunction.

■ **PARAMETER AND FEATURES**

- Full HD 1920*1080P Video
- Video Mode: MJPG & YUY2
- Interface: USB 2.0
- Signal Noise Ratio : >48dB
- Dynamic Range : >72dB
- Focus Range : 70mm to infinity
- Automatic White Balance
- 5-Layer Quality Glass Lens

■ **SYSTEM REQUIREMENTS**

For HD 1080P Video Recording

- 2.4GHz Intel® Core2 Duo
- 2 GB RAM
- 1 GB hard drive space

HOW TO USE THE CAMERA

Plug and play on Windows XP/Vista/7/8/10, Mac 10.6 & above or Android 5.0 & above. You can use it to make video calls on any application with your friends.

There is guide of how to use the webcam software as follows:

Using the AMCAP Software


Please download the AMCAP software first. You can contact us at **support@campark.net** to get it, or you can download it here :

<https://www.campark.net/pages/software>


Please connect the webcam to your computer in advance.

AMCAP Homepage



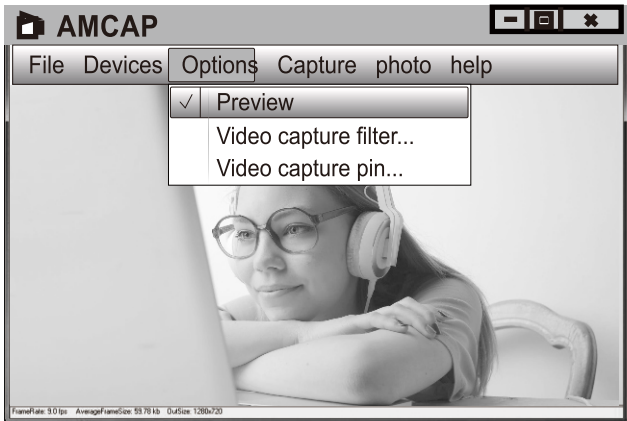

1.The window is blank. Please click the “Options” to select“preview”

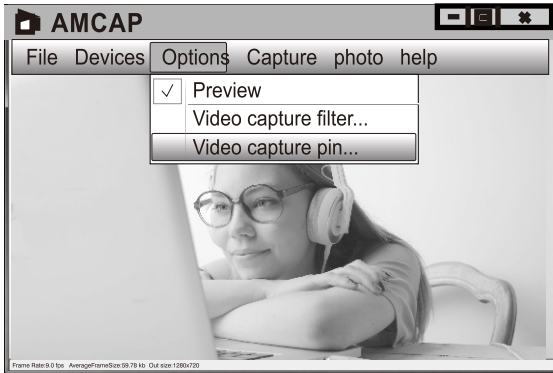

2. You can set attribute like video/phone format, window size, click “Options” to Choose “Video CapturePin...”
3. If you don't want to use microphone, the setting steps are as follows:
My computer - Press “right-hand button” - Manage - Device manager - Sound, Game, video controller - USB Audio device - Press “right-hand button” - Stop

4.HOW to adjust microphone volume?

- XP system:right click the voice icon in the lower right corner, open the volume controller- Option-Attribute-Audio mixer-Choose"USB Audio Device" or "USB Microphone - Sure - Adjust volume as your need.
- Win7/8/10/Vista system: Control panel-Sound, Record - Double click USB Audio Device or USB Microphone- Microphone attribute-level - Adjust volume as your need.

5.How to record your videos?

Capture-Start Capture - Select OK to start capture of video sequence

You can select a directory for saving capture videos

before starting capture, File-Set Capture Directory.



■ Cautions:

- Keep the camera well ventilated while long time working.
- Do not touch the lens with fingers or other sharp objects.
- Clean the lens with clean, soft cloth.
- Do not use the camera in dusty / humid environment.
- Do not drop the camera, severe falling might damage the lens.
- If you have any other questions or problems, please feel free to contact us at

support@campark.net

we have professional team at your service, and your satisfaction is guaranteed.

