

To Register Through Website



1 Visit Foxwell website www.foxwelltech.us and press **Register** icon, or go to the registration page by selecting **Support** from home page and then click **Register**.



2 Enter one of your email addresses as your user ID and click the **Send Code** button. Find the security code in your mailbox, input the code, create a password and click **Free Registration** to complete.




3 Sign in to the Member Center, click **New Registration**, input the right serial number and click **Submit** to activate the product. **(Password is not required)**


Serial Number

To find the serial number:


1. On the back of the main unit.

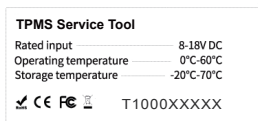


2. In the scanner About page.

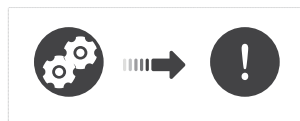


To Register Via Update Client

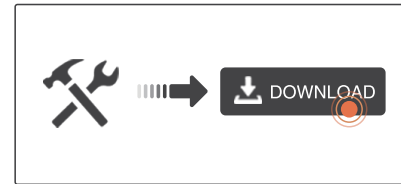


1 Visit our site www.foxwelltech.us and then click **Support** at the home page. Click **Tools** at the support page and find the product you have to download the update client.

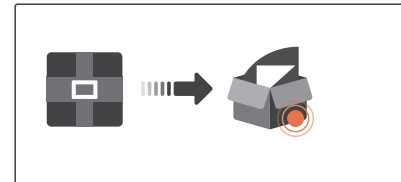


2 Unzip the file and find the installer to install the update client to your computer.

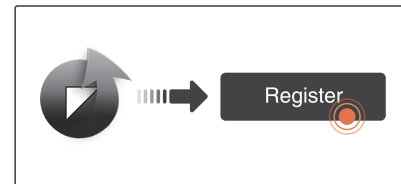


3 Click the desktop icon to launch the update client and click **Register** icon to create a Foxwell ID.

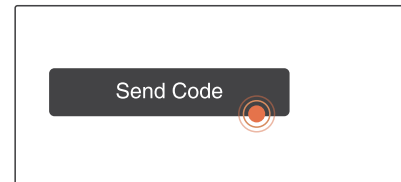

4 Enter one of your email addresses as your user ID and click the **Send Code** button. We will send a 4-digit verification code to the email you just entered.

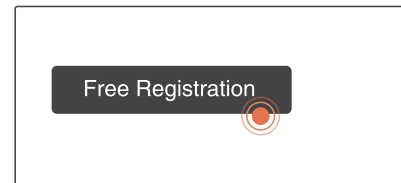


5 Find the security code in your mailbox, input the code, create a password and click **Free Registration** to complete.

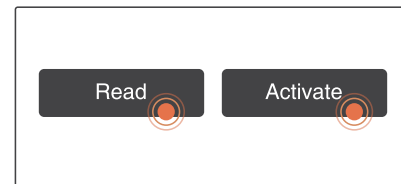


6 Sign in your Foxwell account and select **Activation**. Input a serial number or click the **Read** icon to read the SN from the scanner. Click **Activate** button to activate. **(Password is not required)**


TPMS Sensor Activation

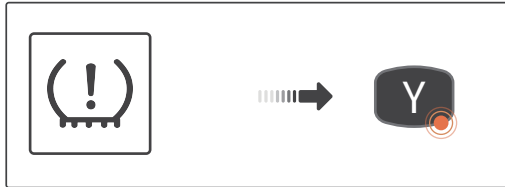


1 Highlight **TPMS** from the Main Menu and press the **YES** key to start.

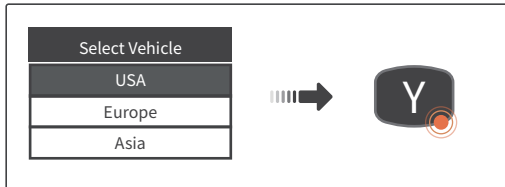

2 On each screen that appears, select the correct option and then press the **YES** key. Do this until the complete vehicle information is entered.

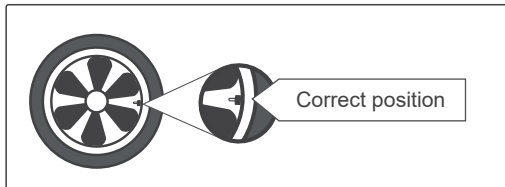

3 Place the tool to the correct position to insure sensor activation and decode.

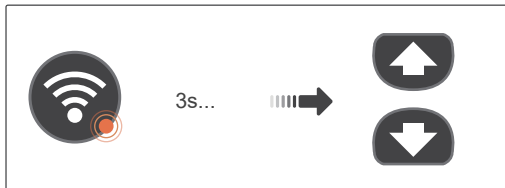


4 Press **Activate** to test the TPMS. If test passes, TPMS data will be briefly displayed for 3 seconds.

Battery Charging

**The scanner has a built-in lithium-ion polymer rechargeable battery.
The unit charges on any of the following sources:**

 12-volt wall plug




USB connection to personal computer




Update


Before updating, please make sure you have created a Foxwell ID and your network works correctly.

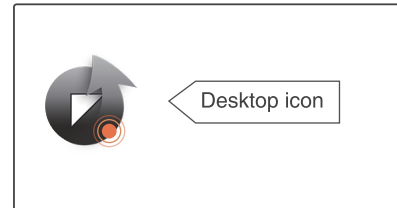

1 Launch the update tool **FoxAssist** by double clicking the desktop icon and login with your Foxwell ID and password.

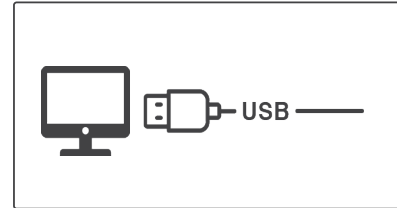

2 Connect the scanner to the computer with the USB cable provided.

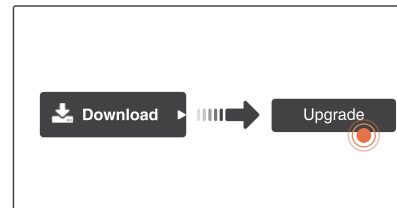

3 Select **Download** then all the updates applicable to your tool display. Click the check box(s) in front of the software you wish to update and then click **Upgrade** button to start updating.

Contact Us

For service and support, please contact us.

- WebSite : www.foxwelltech.us
- E-mail : support@foxwelltech.com
- Service Number : + 86 - 755 - 26697229
- Fax : + 86 - 755 - 26897226



REGISTER YOUR PRODUCT AT
<http://www.foxwelltech.us/register.html>