




Smart Fingerprint Lock R2

Quick Start Guide

Please follow us on YouTube channel: YEEUU
or visit our website: YEEUU.com
or email to support@yeeuu.com

to get more info of operation manual.

Lock Show

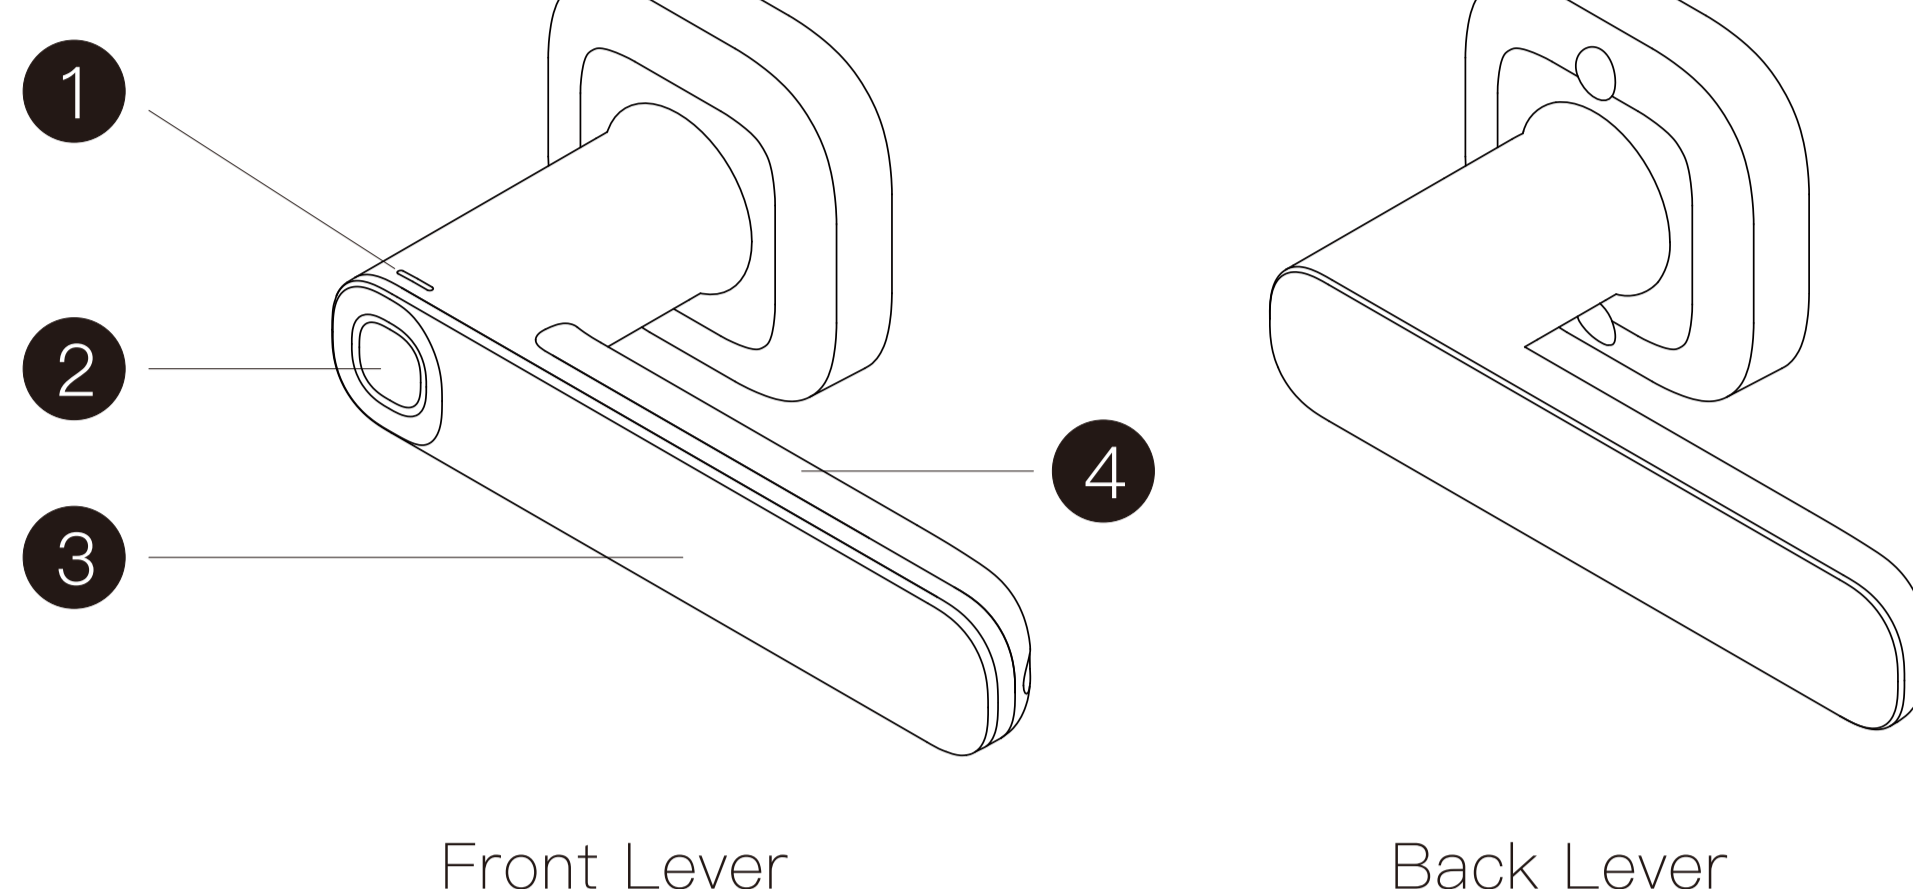

Front Lever

Back Lever

- 1 Indicator Light
- 2 Fingerprint Identification Area
- 3 Door Card Identification Area (for Access Card Version)
- 4 Battery Cover

Basic Parameters

Door Opening Method: Fingerprint, Card (for Access Card Version), APP

Storage Capacity: 100PCS of Door Cards/Fingerprints

Working Voltage: 2 x No.7 AAA alkaline dry batteries

Battery Life: Up to 1 year (unlock 10 times a day)

Working Temperature: -20°C ~ 70°C

Working Humidity: 40%RH ~ 80%RH

Door Thickness: 30mm-80mm

Door Prep: 54mm diameter face hole & 25mm diameter latch hole

Daily Maintenance

- Installation Environment: Requires at least a canopy, do not keep the lock completely exposed in open air
- Please do not scratch the fingerprint identification area with a sharp object
- Please exchange both two batteries at the same time, do not use new batteries with old ones
- Please adjust the door or door frame in time if it deforms, otherwise the latch will not enter the door frame hole position smoothly

Instructions

Note: Please install 2 x No.7 AAA alkaline dry batteries before use.

Download APP:

Log in AppStore/GooglePlay to search “YEEUU” and download the APP.

Add device:

Register and log in “YEEUU” account; click “Add Device” or click symbol “+” at the upper right corner on “Home page”; select “Auto Scan” to start searching; after the device is searched, click “next” to connect the lock to be added.

Add/use fingerprint to open the door:

Log in “YEEUU” APP; select the device and enter “Settings” page; click “Fingerprint Management” to enter the page; click “Add Fingerprint” at the upper right corner and put the finger on the fingerprint identification area for admission.

Add/use door card to open the door (for Access Card Version):

Log in “YEEUU” APP; select the device and enter “Settings” page; click “Door Card Management” to enter the page; click “Add Door Card” at the upper right corner and then put the door card on the card identification area for admission.

Use APP to open the door:

Log in “YEEUU” APP; select the page for the device to be entered, click the icon at the page center after your APP is connected with the lock; turn the handle to open the door when the green light flashes.

View records:

Log in “YEEUU” APP; select the page for the device to be entered; after your APP is connected with the lock, click “Opening Record/Alarm” to enter the page to view opening/alarm records.

Reset/unbind the door lock:

Reset the door lock: recharge the device and it will enter a countdown of 20 seconds; after the fingerprint of the administrator is identified successfully, press and hold the fingerprint until the white light start to flash to reset the door lock.

Unbind the door lock: [Remove Device] button shows up when a non-administrator user performs the above mentioned operations, click it and follow the prompt to unbind.

Low Voltage Alarm:

Yellow light flashes 2 times

Operation Failed:

Red light flashes 2 times, buzzing 2 times

Error Lock:

Red light flashes 5 times

Turn on “Stay Unlock” mode:

After the fingerprint is recognized successfully, press and hold the fingerprint identification area for 8 seconds until the white indicator light starts to flash, and then keep the white light on for 2 seconds more to turn on the “Normal Open” function. White light indicates in the normal fingerprint identification under “Normal Open” mode.

Turn off “Stay Unlock” mode:

Please press and hold the fingerprint identification area for 8 seconds until the green indicator light starts to flash, and then keep the green light on for 2 seconds more to turn off the “Stay Unlock” function. Green light indicates in the normal fingerprint identification under “Stay Unlock” mode.

Frequently Asked Question

Opening door by mobile phone fails.

Check whether the batteries are loaded and working properly; Check the networking status of mobile phone and perform operation again; Remove the batteries and re-load.

Opening door by card fails.

Check whether the batteries are loaded and working properly; Confirm whether the card has been added; Remove the batteries and re-load.

Opening door by fingerprint fails.

Check whether the batteries are loaded and working properly; Confirm whether the fingerprint has been added; Remove the batteries and re-load; Ensure that the finger is dry.

Yellow light flashes when opening the door.

Low power, please replace 2 No.7 batteries in time.

Red light flashes 5 times when opening the door.

Error lock, please try to unlock the door by fingerprint/door card/password 1 minute later, or use the APP to unlock it.


No response when opening the door.

Please check if the batteries are loose; If the batteries are dead, please replace the batteries.


Login/registration cannot be performed normally.

Please check whether the network is running properly.

Product Accessories Diagram

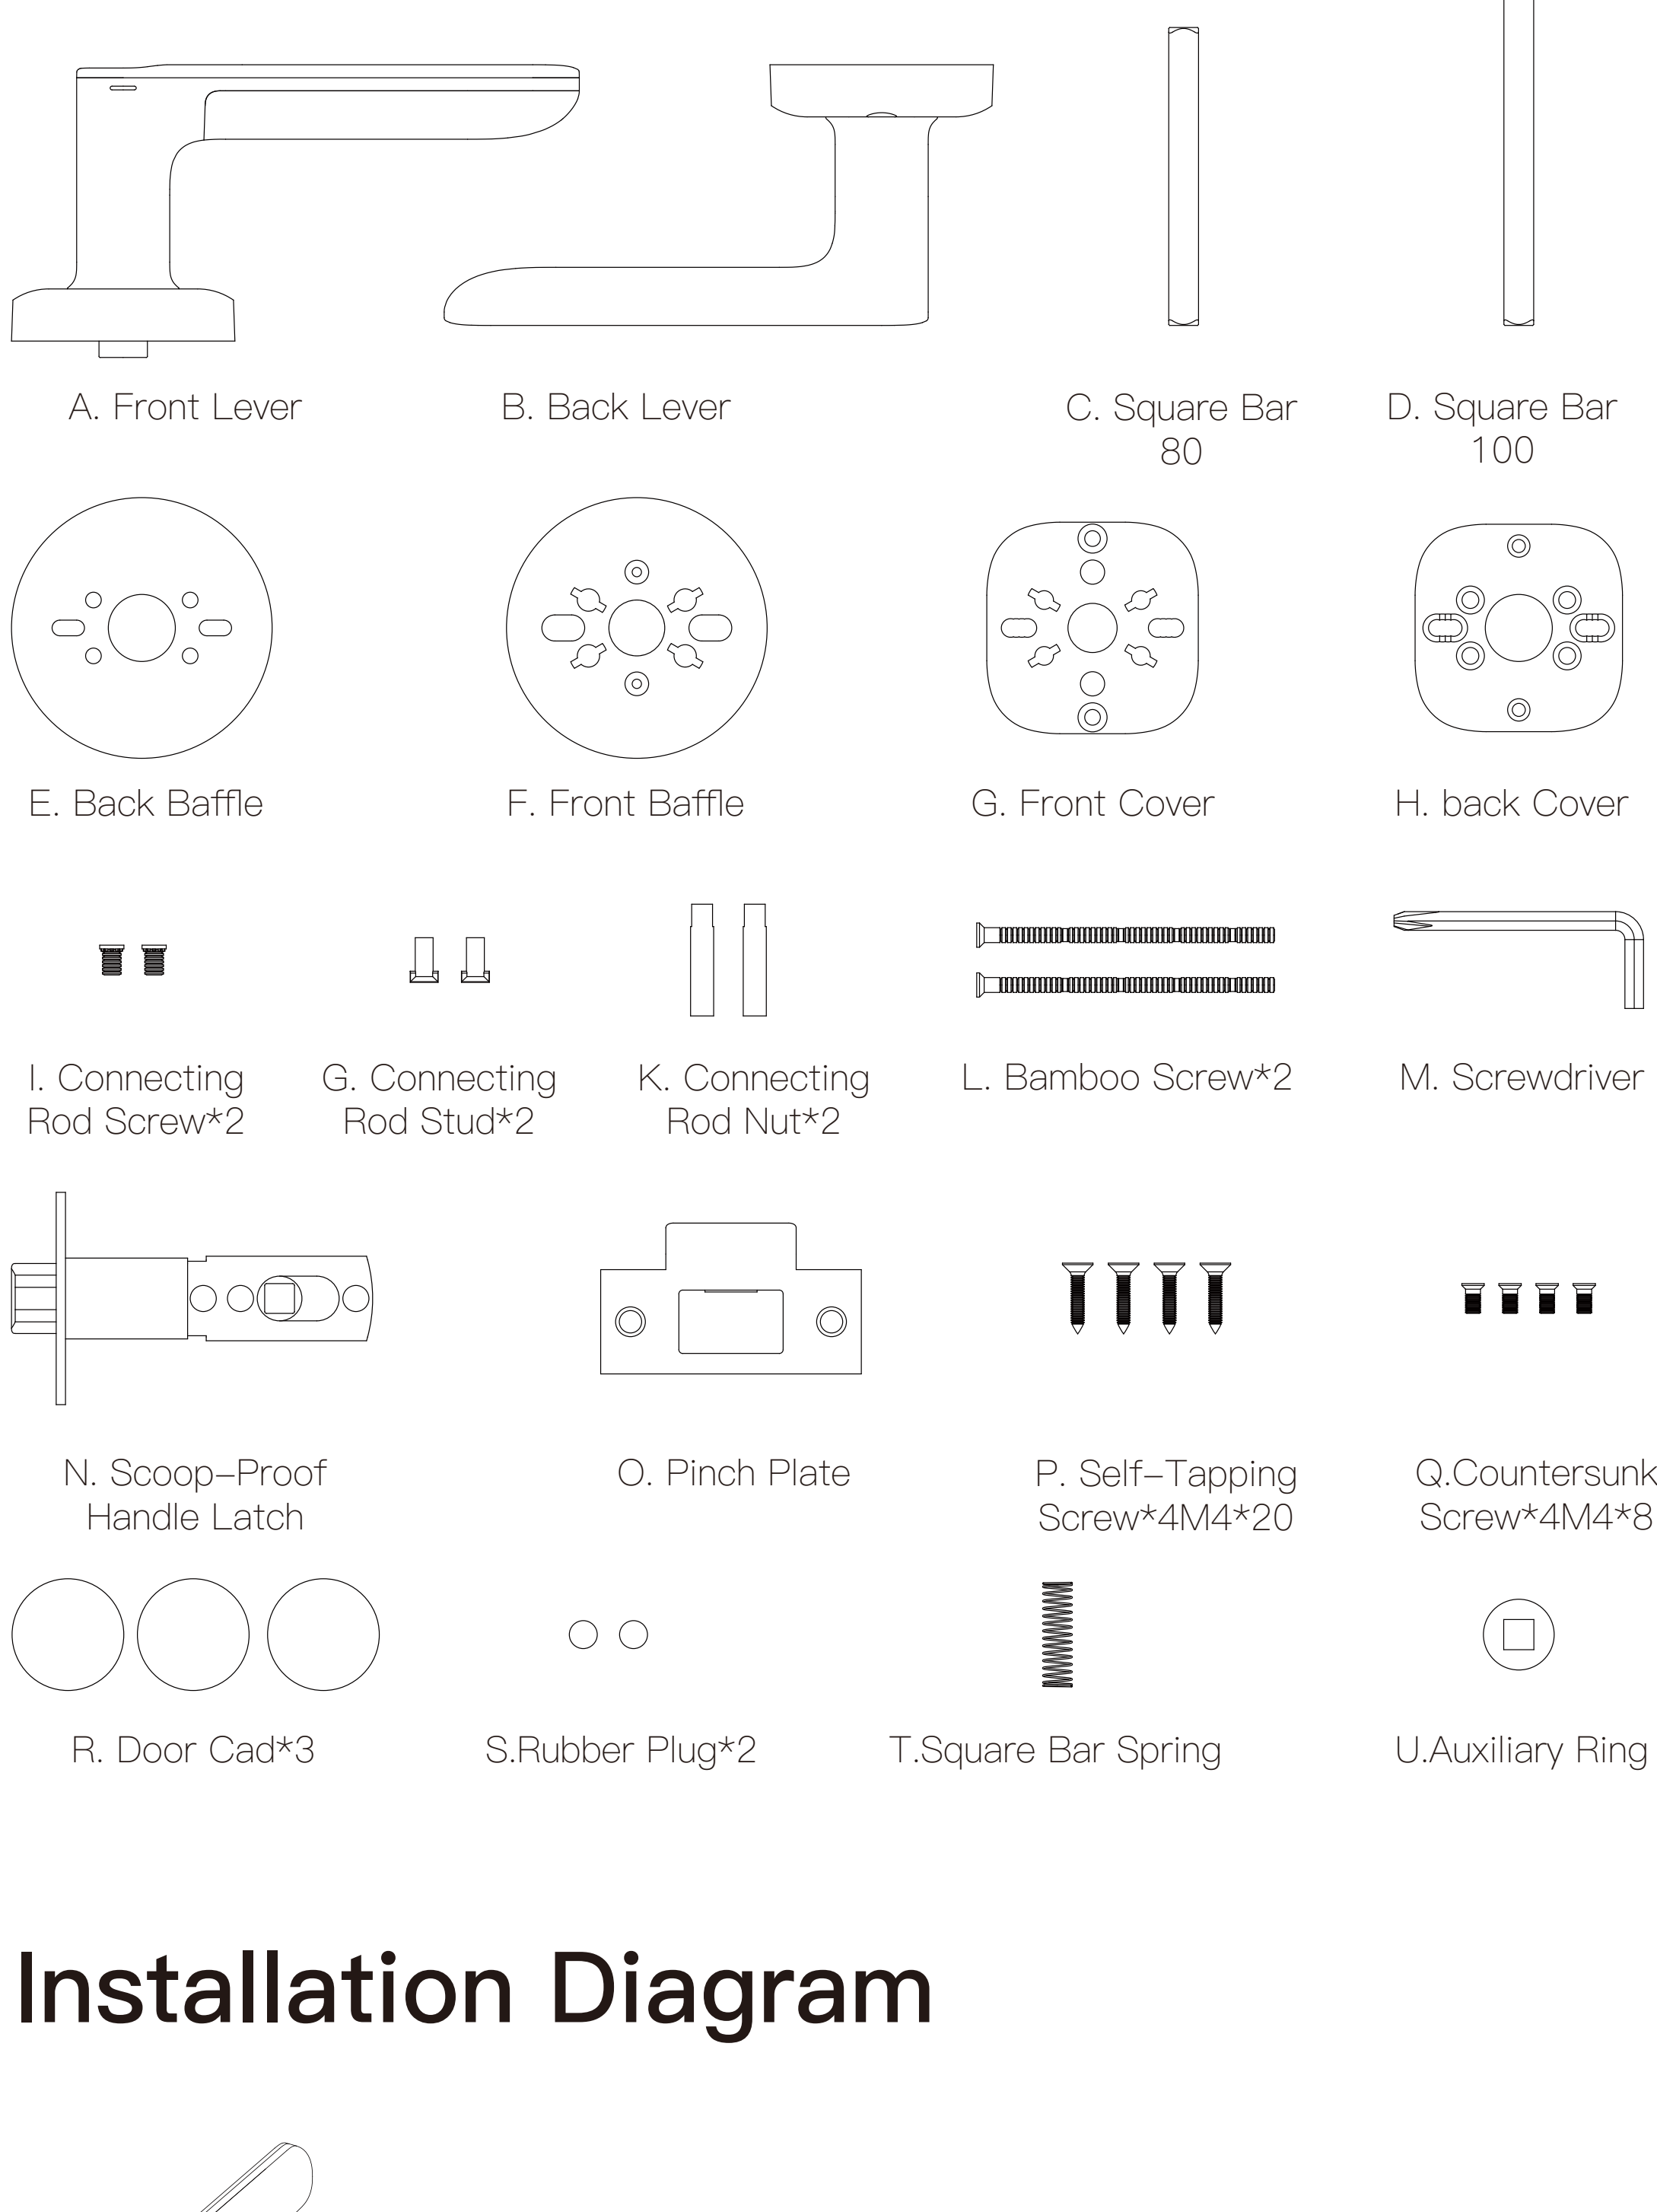


Installation Diagram

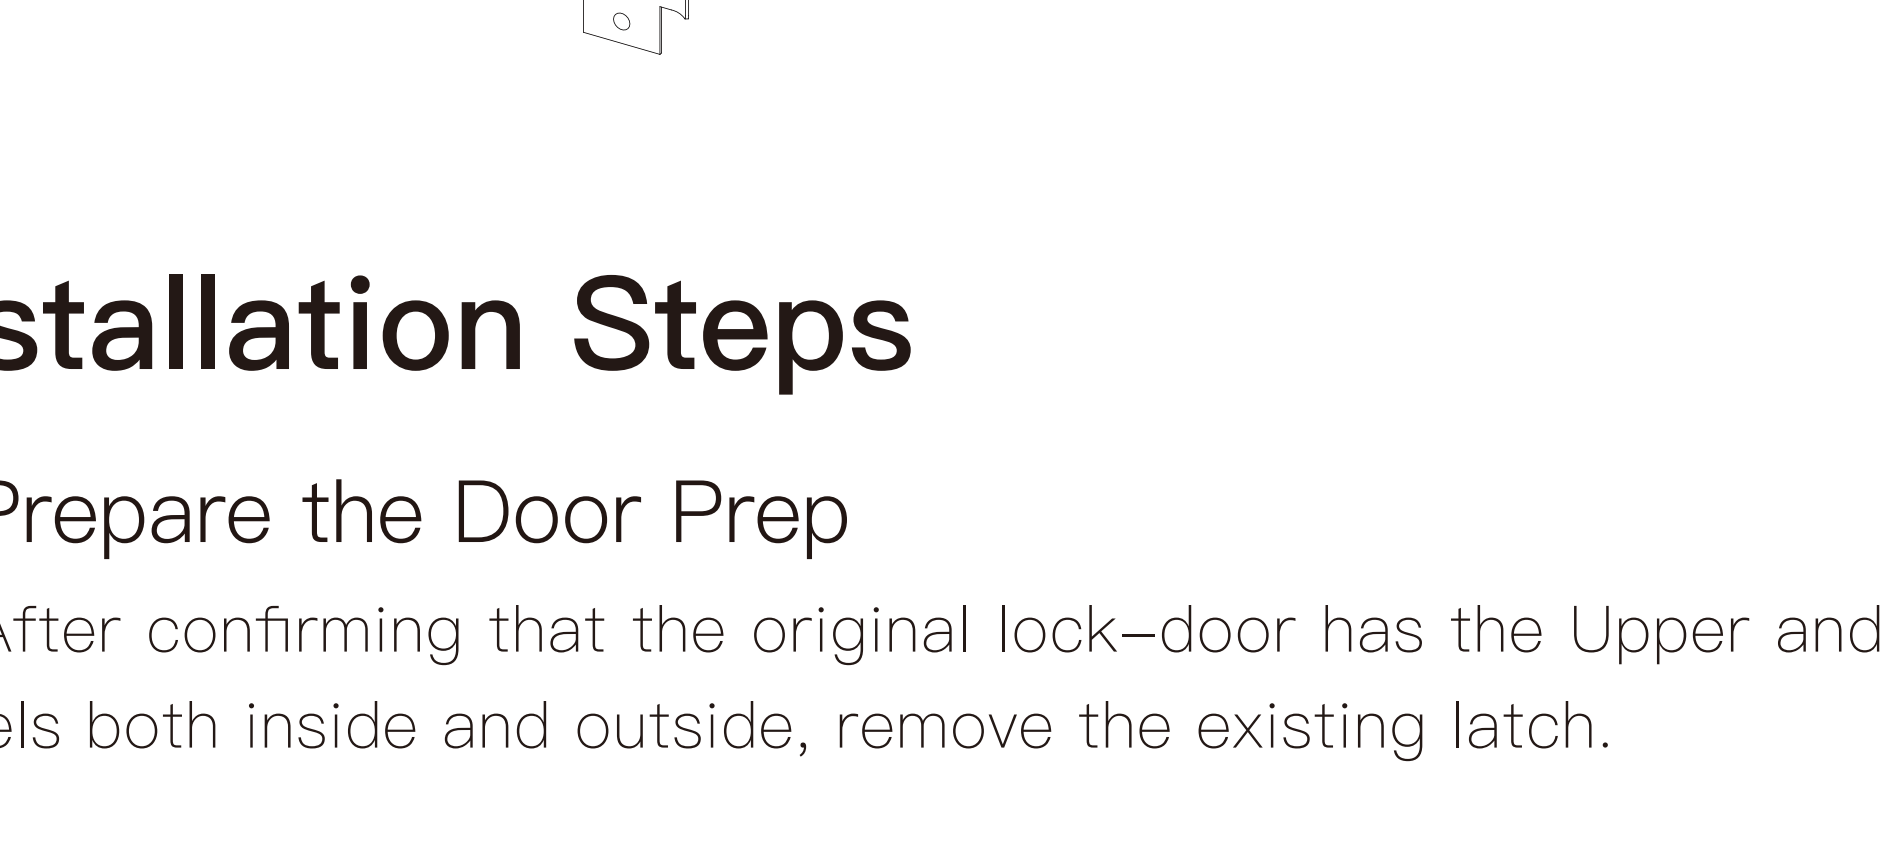


Installation Steps

1. Prepare the Door Prep

1) After confirming that the original lock-door has the Upper and Lower Panels both inside and outside, remove the existing latch.

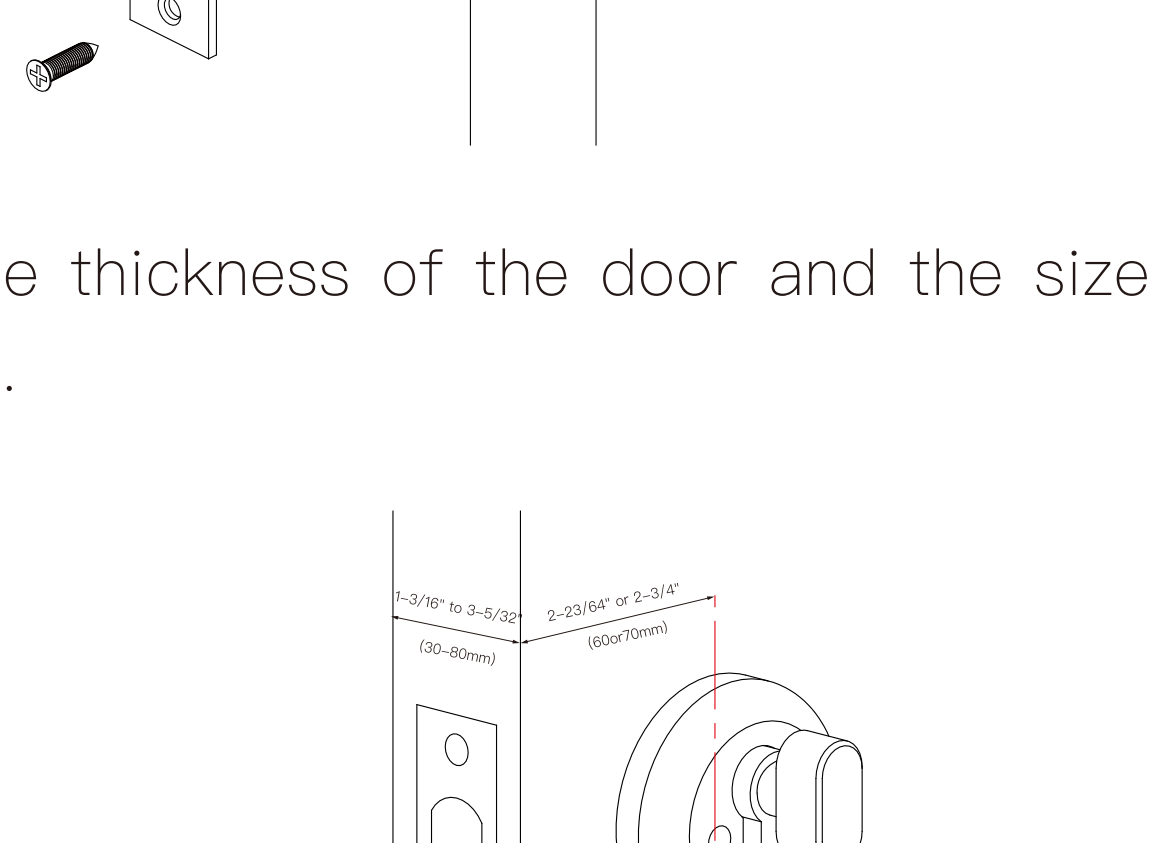


2) Check the thickness of the door and the size of the door prep, and record them.

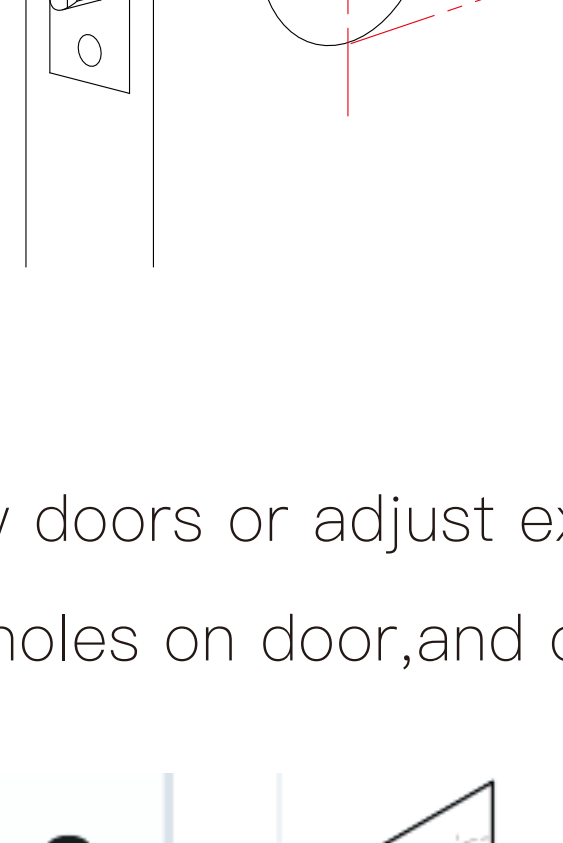

3)Prepare door&frame.


Necessary only for new doors or adjust existing prep.

Use template to mark holes on door,and open a hole with a tool

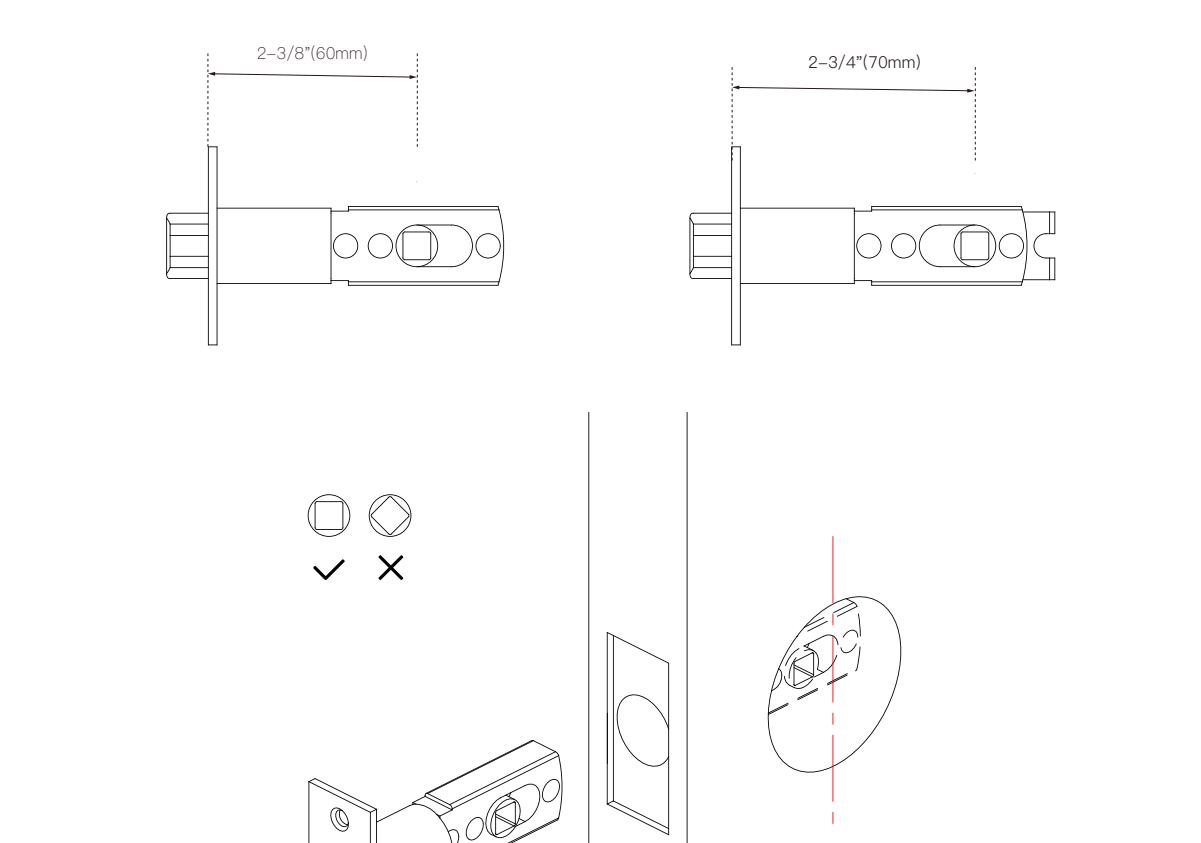


2. Install Handle Latch

Adjust the length of the handle latch according to the door margin; install the handle latch. NOTE: square bar hole must be vertical.

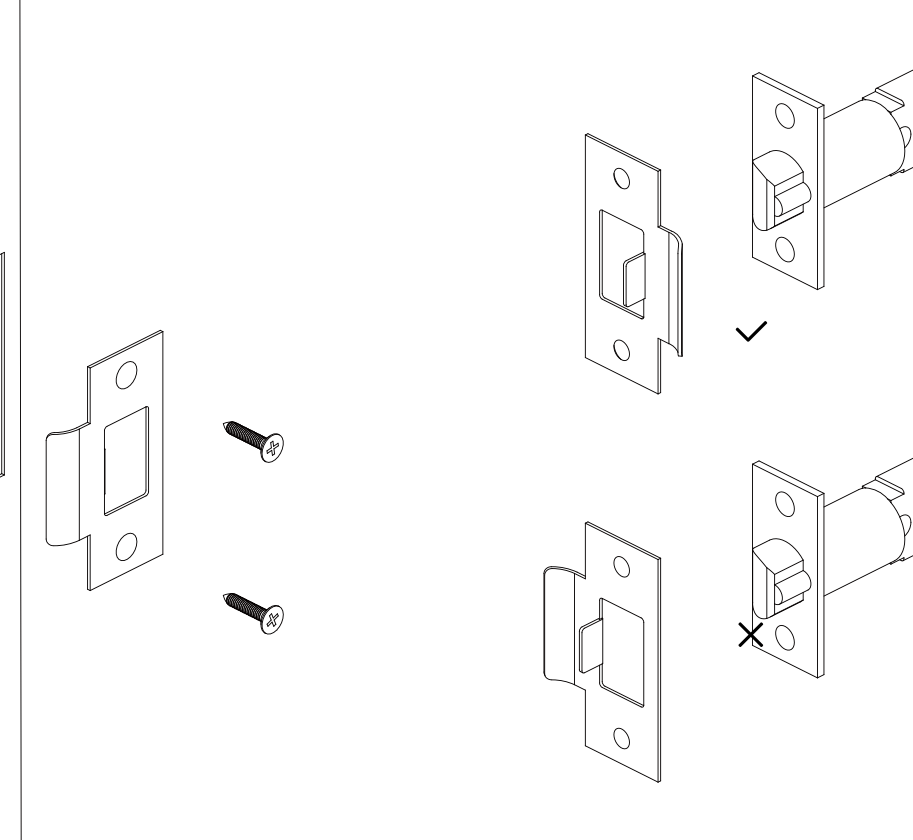


3. Install Pinch Plate

For scenes of newly installed door or re-installation requirement only.

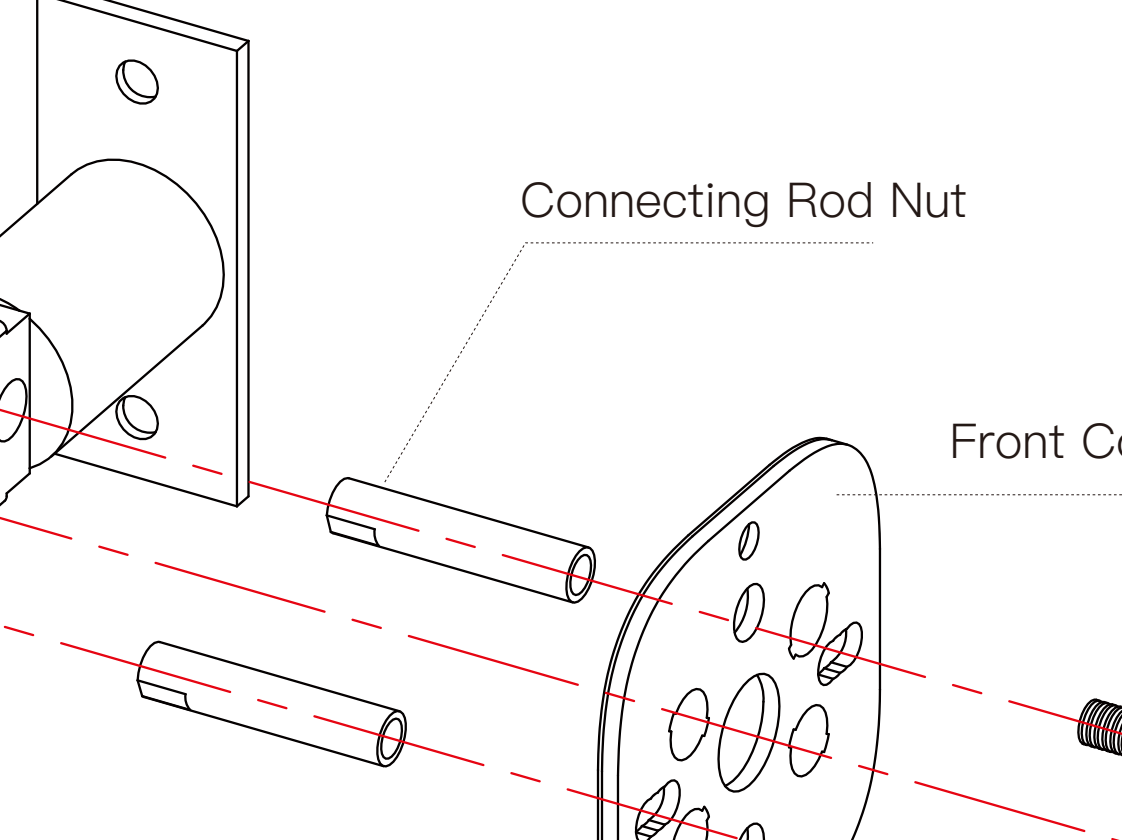


4. Assemble Outside Lever

1) Assemble front cover and connecting rod nut and note: the center hole of the front cover must be concentric with the square hole of the handle latch.

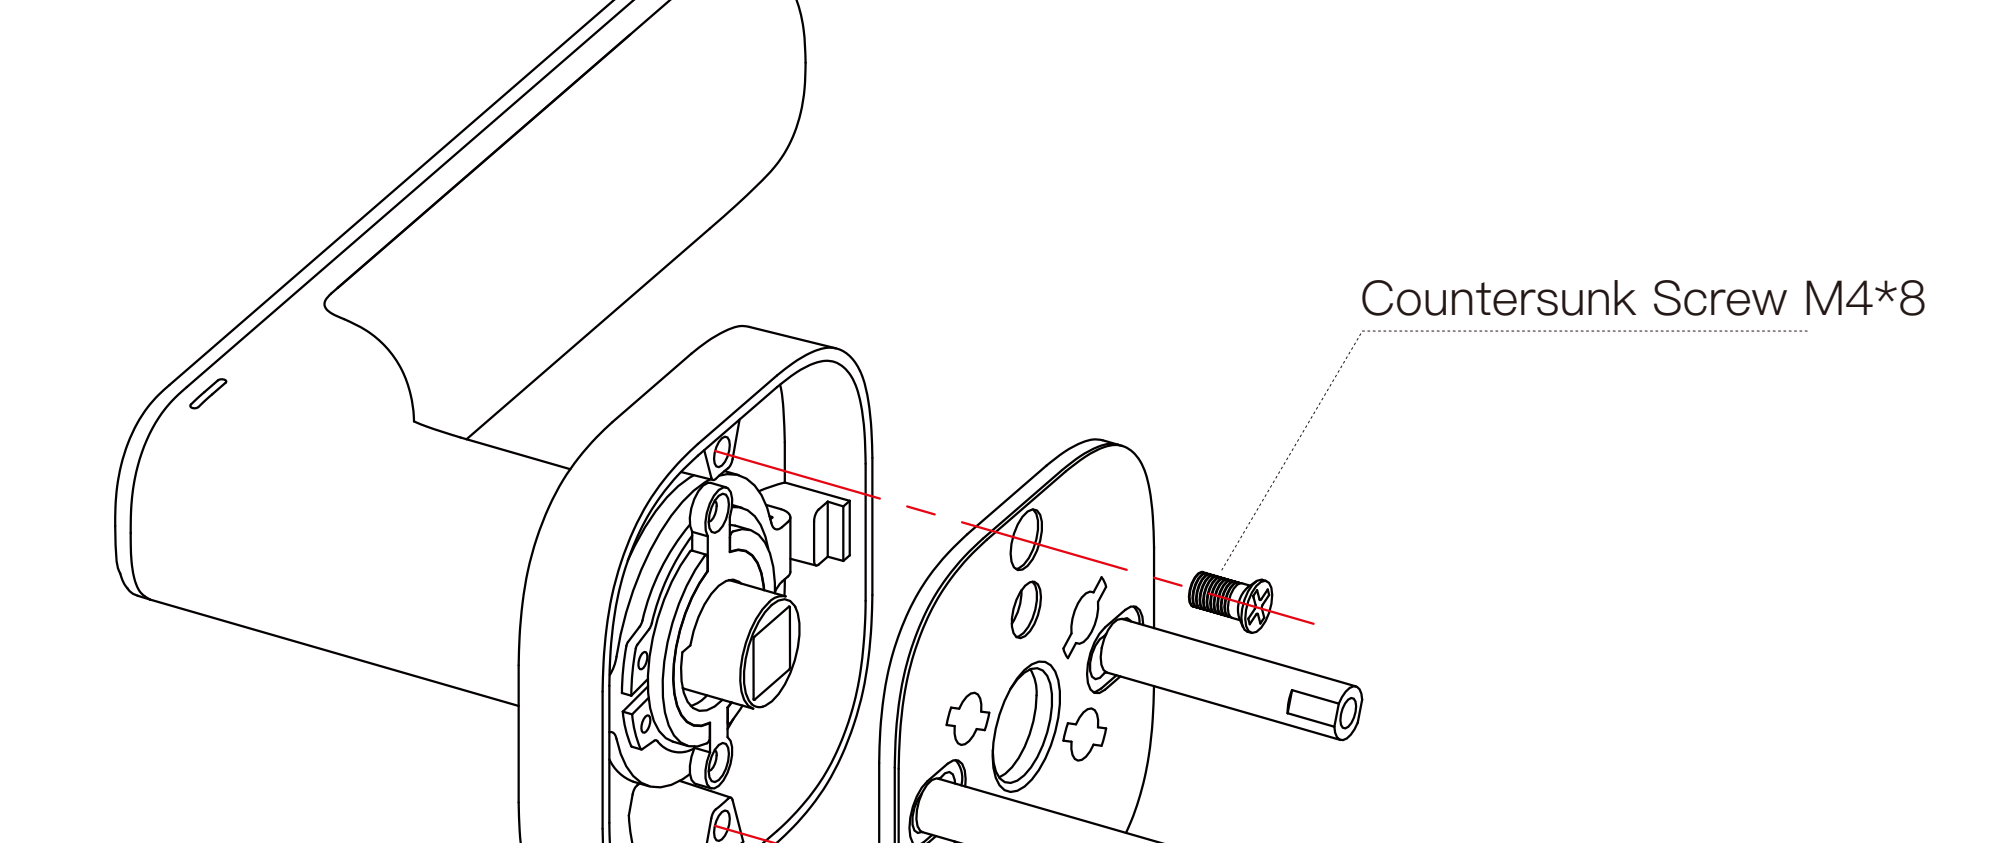


5. Install Front Lever

1) Confirm whether front or back baffle is needed according to the size of door prep, cut bamboo screws according to the door thickness, ensure that the screw length is less than the door thickness by 10mm at most.

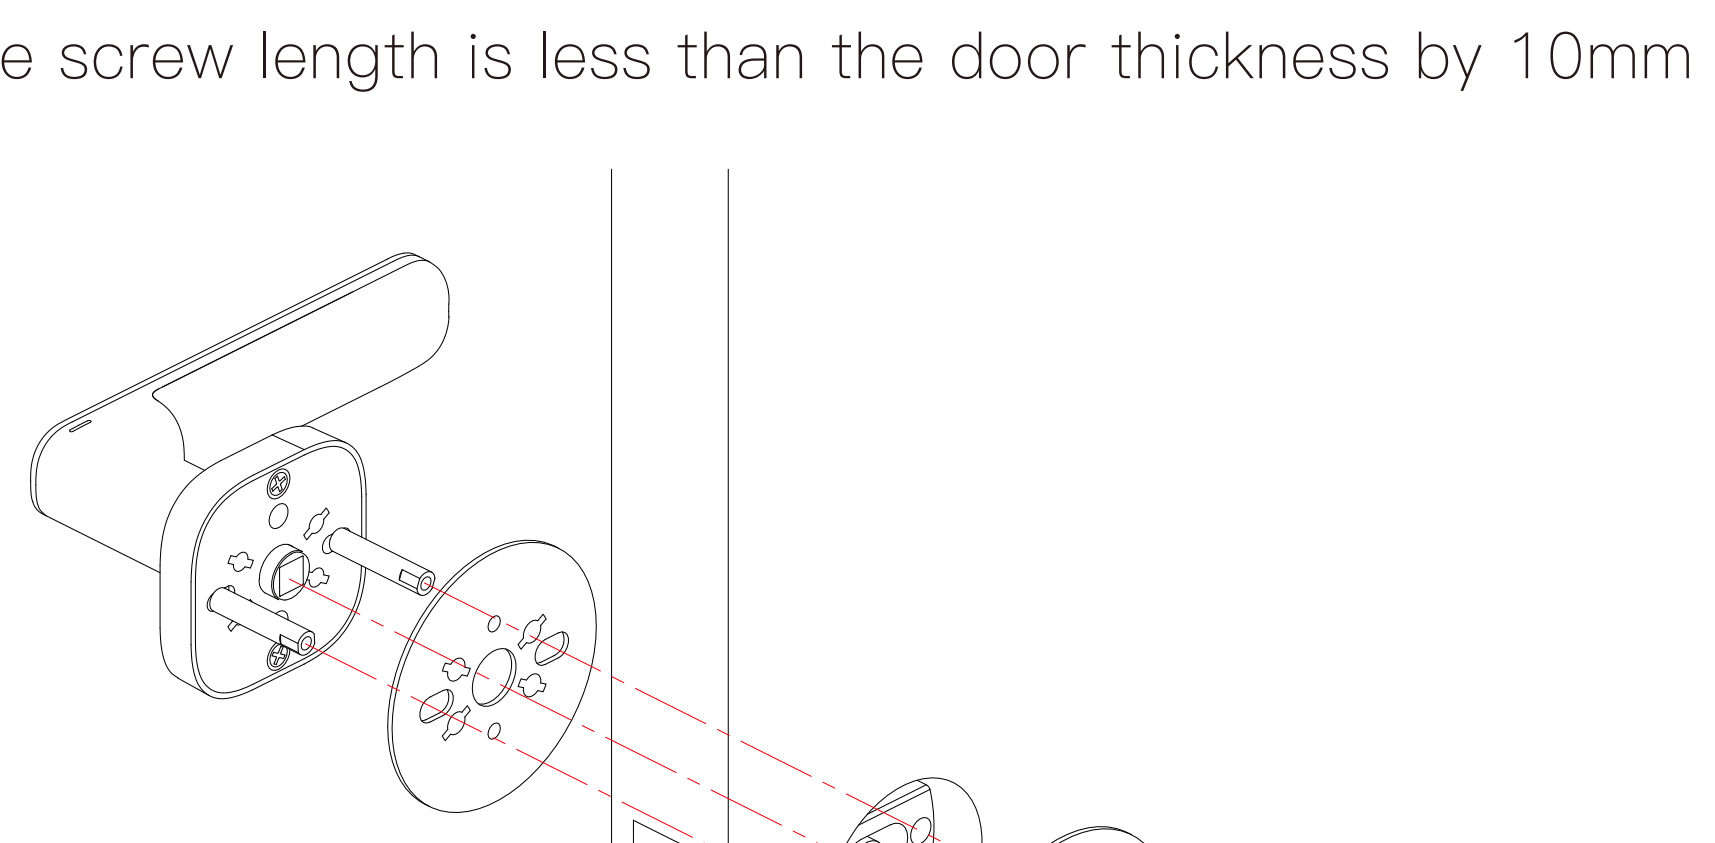


2) Install auxiliary ring and square bar, identify the fingerprint on front lever, turn the Lever to test whether it is flexible and handle latch shrinks smoothly. If it is stuck, please check that if the installation is dislocated. Remove the auxiliary ring after the installation is confirmed correct.

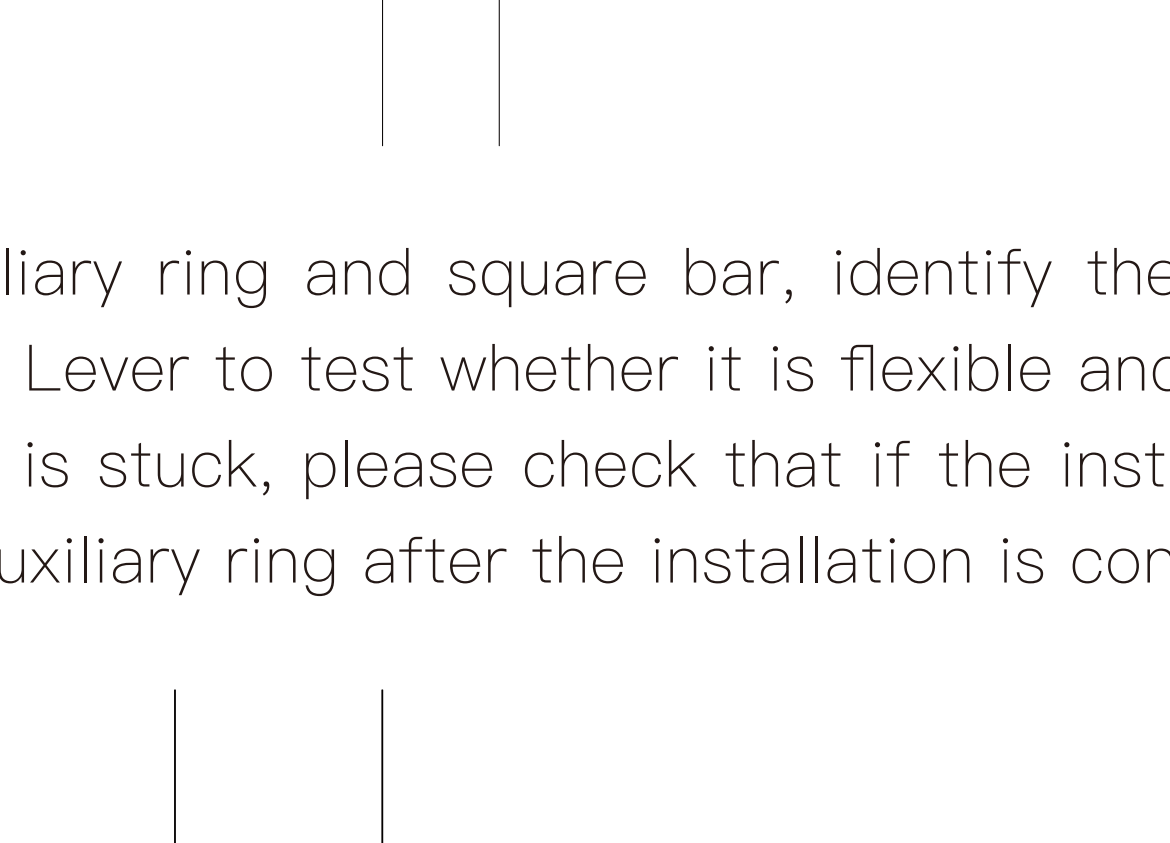

6. Install Back Lever


Choose square bar according to the door thickness. Assemble the square bar spring into the center square hole of the back lever before installation.

Fix the screw and paste the rubber plug.

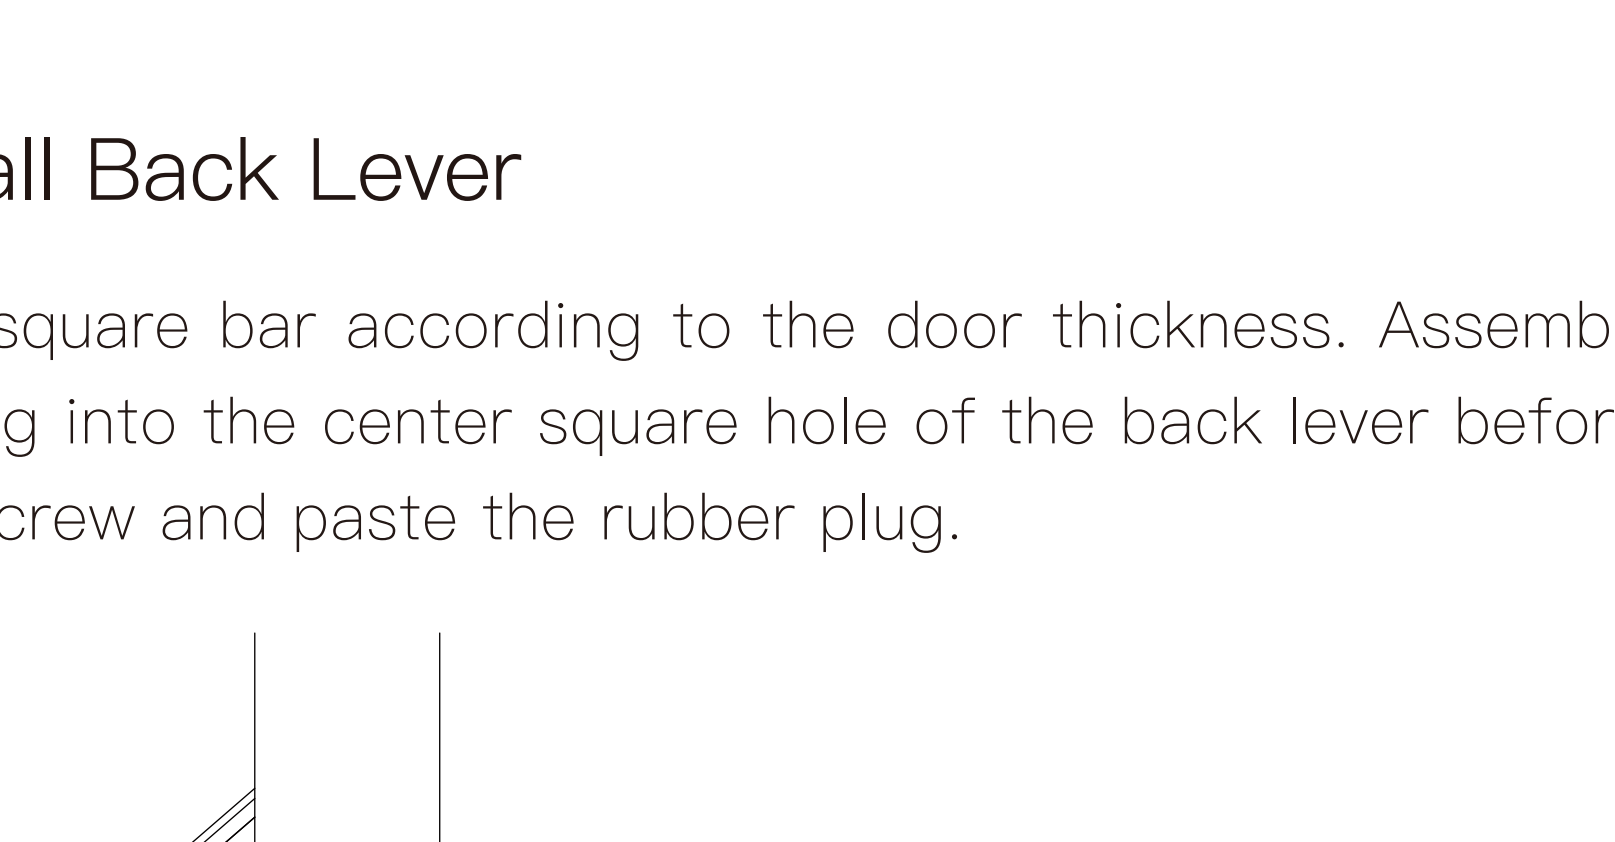

7. Testing Operation

After installation, turn the back lever to check whether it is flexible and the handle latch shrinks smoothly. If it is stuck, please check whether the lever installation is dislocated.

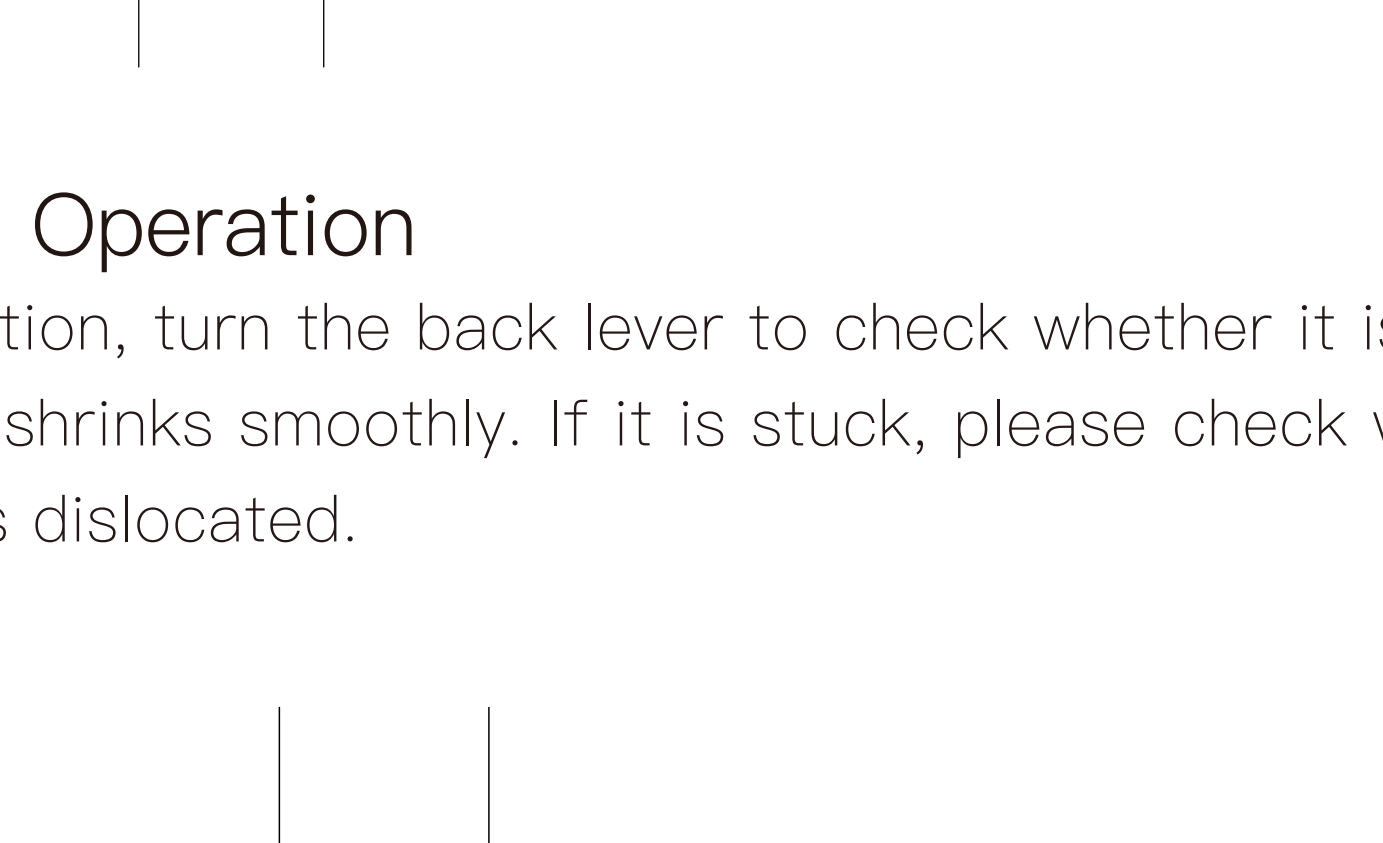

Congratulations, you have successfully installed the YEEUU Fingerprint Lock!



YEEUU Smart Fingerprint Lock R2

Hangzhou Ujia Technology Co., Ltd.

Made in China



Download APP

1. Open Google play or App Store.
2. Download and install "YEEUU" App.

