

**TIOIPRO** User Manual V3.0 E N

# CONTENTS

(EN) English		03
(DE) Deutsch	}	09
(CN) 中文		15
(JP) 日本語		21
(KR) 한국어		27


# 

- Please read user manual carefully before using the light.
- Product will generate heat while working, please be cautious with that to avoid any possible harm.
- Please don't shine into eyes directly to avoid harm to eyes.
- Please keep the light away from children.
- Please use WUBEN or WUBEN recommended batteries.
- Please don't disassemble the light or it will not be covered by WUBEN warranty policy.
- Please don't throw the product into fire.
- This is not a diving product, please don't use it underwater for a long time.

E

### Package List


Before using this product, please check whether the contents of the package are complete.

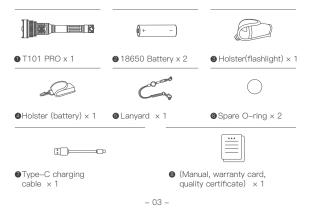

# **Product Operation**


#### 1. About Product

WUBEN T101 PRO is a multi-functional flashlight specially designed for searching and hunting. It utilizes 1× CREE XHP70.2 LED, and emits 3500 lumens max output. Powered by two high-drain 18650 batteries, with built-in charging design, it is very convenient to use.

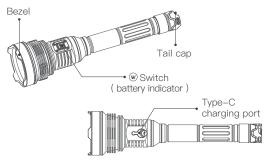

#### 2. Installation

 Please remove the insulation plate before using.



#### 3. Operation

ON/OFF: Tap on the tail switch to turn the light momentary on, click to turn it constant on, click again to turn it off. Output selections: When the light is on, single click on switch to cycle through Eco-Low-Med-High-Turbo.

Instant Turbo: Press and hold 
we switch for 1s to activate instant Turbo, release to return to the previous status.



#### 4. Charging

Plug the charging cable and click the tail switch until the indicator is red light constant on. When the indicator beneath the  $\circledast$  switch is blue light constant on, it indicates charging finished, please click on the switch again and unplug the charging cable.

**Note:** Indicator is beneath the side switch, red light constant on indicates charging, blue light constant on indicates charging finished. If one of the batteries is full while the other is not, it will be blue light flashes. If abnormal charging, it will be blue light and red light flash alternately. Please use 5V/2A adapter, it takes about 4 hours to fully charge the flashlight.

 $\triangle$  Make sure the batteries with protection circuit board.

▲ Make sure rubber cap covered well after charging finished to promise the IP68 waterproof level.

#### 5. Battery status indication

Power 100%	~31% E	lue light constant on (off after 5s)
Power 30%~	15% F	led light constant on (off after 5s)
Power under	15% F	led light flashes

### Parameters

FL1 Standard	Turbo	High	Med	Low	Eco	Strobe	SOS
342	3500~1500 LM	1250LM	450LM	100LM	10lm	3500LM	200LM
Q	3+79 mins	Зh	6h	29.2h	290h	/	/
Ν	500m			N	1m		
۲	62653cd			- Maria	IP68 (2m underwater for 1		er for 1h)
4 <b>1</b> 4	367g/12.95oz (without battery)   463g/16.33oz (with battery)						
لسسس	259mm x 65mm   10.20in x 2.56in (L x D)						

All data from experiments of WUBEN lab according to the ANSI/NEMA FL1 standard, may vary because of different experiment equipment, experiment environment or other factors. Experiments are based on WUBEN 18650 (2600mAh) Li-ion battery.

## **Optional accessories**

WUBEN ABE3400 battery; WUBEN ABE3100C battery.

# Maintenance

- The O-Ring may be damaged for a long time use, please replace the O-Ring in time to ensure the waterproofness of the product.
- Please use WUBEN battery or WUBEN recommended batteries.
- When the flashlight indicates low power, please charge or replace the battery in time to avoid affecting the durability of the battery.
- Please use alcohol and rag to clean the conductive parts of the flashlight in time.
- When not in use for a long time, please remove the battery to prevent the battery from leaking or exploding, store the flashlight in a dry and ventilated place.

# FAQs

Problems	Causes	Solutions	
Abnormal flash or failure to turn on	Check if the switch is turned on correctly	Turn on the switch	
	Check if it is assembled in place	Tighten the assembly parts	
	Check if the battery is no power	Use the charger to check the battery	
	Check if the battery is reversed	Remove the battery and reassemble it correctly	
	Check if the conductive position is dirty	Clean the surface with alcohol	
Abnormal noise	Check if foreign matter falls in the tube	Pour out possible foreign matterl	
	Part damage	Return the light to local distributor	

If your problems still not solved yet, please contact your local dealer for after-sales service.

# Warranty policy

- 1. Warranty coverage
- 15 days replacement: Within 15 days from the date of purchase, if the product has quality problems, customers can request free replacement.
- 1 year warranty: Within 1 year from the date of purchase, if the product has quality problems, WUBEN will offer free repair.
- 5 years warranty: Within 5 years from the date of purchase, if the product (accessories excluded) has quality problems, WUBEN will offer free repair for WUBEN registered customers.
- Lifetime maintenance: From the date of purchase, if the product has problem after 5 years, WUBEN will offer paid repair for WUBEN registered customers .

- If proof of purchase cannot be provided, it will be counted on the date of manufacture.
- If there is any dispute, the two parties will coordinate to solve.

#### 2. Beyond warranty

- Man-made damage.
- Damage caused by not following the instructions.
- Damage caused by improper use of the battery.
- Abnormal wear and tear.
- Damage caused by irresistible factors.
- Gifts.

The final interpretation right is reserved by WUBEN.

#### SHENZHEN SHENGQI LIGHTING TECHNOLOGY CO., LTD.

E-mail: info@wubenlight.com Web: www.wubenlight.com Add: 202#, Building A, Jihe E-Business Park, No. 33 Yangmei Road, Bantian Street, Longgang District, Shenzhen, China





WUBEN website

Facebook